

# Bevestigingspatroon



REV

0

REV DATE

29/08/24

DWG NAME

C\_SBE380\_2D0\_NP\_JTB-FN-NL

Art. Nr.

=

SBE380

Bevestigingsmiddelen

=


Hout op hout

Balk op draagbalk


Type bevestiging

=

Volledige vernageling

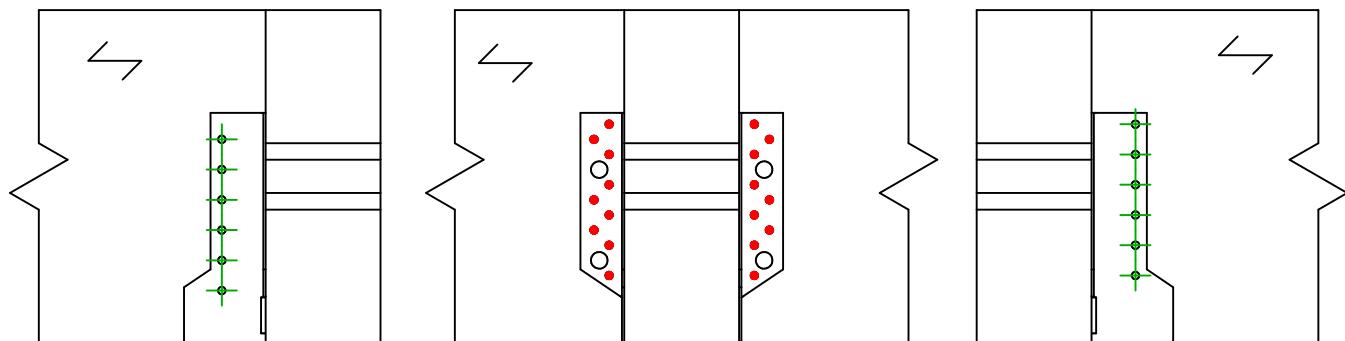

$$h = (380 - L) / 2$$

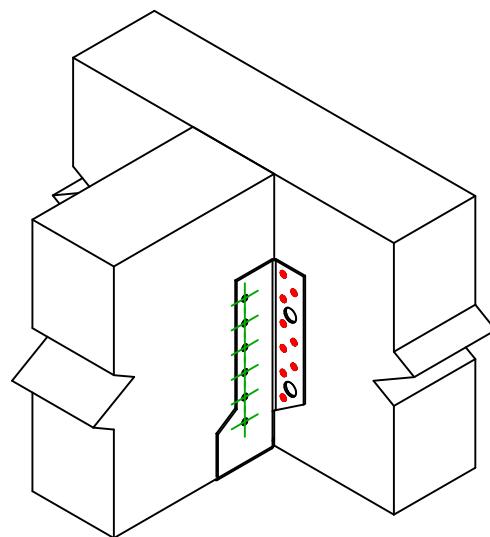

Draagbalk Bevestigingen	Symbol	Bevestigingsmiddelen	Bevestigingsmiddelen	Aantal	
		CNA	CNA4.0X35 / CNA4.0X50	18	
		CSA	CSA5.0X35 / CSA5.0X40		
		-	-		
Balk bevestiging(en)	Symbol	Bevestigingsmiddelen	L < 64mm	L > 64mm	Aantal
		CNA	CNA4.0X35	CNA4.0X50	12
		CSA	CSA5.0X35	CSA5.0X40	